
1 Before driving

| | |
|---|-----------|
| 1-1. Key information | 2 |
| Keys | 2 |
| 1-2. Opening, closing and locking the doors | 4 |
| Wireless remote control | 4 |
| Side doors | 7 |
| Back door | 12 |
| 1-3. Adjustable components | 17 |
| Front seats | 17 |
| Rear seats | 20 |
| Driving position memory | 23 |
| Head restraints | 25 |
| Seat belts | 26 |
| Steering wheel (manually adjustable type) | 33 |
| Steering wheel (power-adjustable type) | 34 |
| Anti-glare inside rear view mirror | 35 |
| Outside rear view mirrors | 36 |
| Roof luggage carrier | 38 |
| 1-4. Opening and closing the windows and moon roof | 40 |
| Power windows | 40 |
| Moon roof | 43 |

| | |
|--|-----------|
| 1-5. Refueling | 48 |
| Opening the fuel tank cap | 48 |
| 1-6. Theft deterrent system | 51 |
| Engine immobilizer system | 51 |
| Alarm | 53 |
| Theft prevention labels (U.S.A.) | 55 |
| 1-7. Safety information | 56 |
| Correct driving posture | 56 |
| SRS airbags | 58 |
| Front passenger occupant classification system | 70 |
| Child restraint systems | 75 |
| Installing child restraints | 78 |

2 When driving

| | |
|--------------------------------------|------------|
| 2-1. Driving procedures | 90 |
| Driving the vehicle | 90 |
| Starting the engine | 97 |
| Automatic Transmission | 100 |
| Turn signal lever | 105 |
| Parking brake | 106 |
| 2-2. Instrument cluster | 107 |
| Gauges and meters | 107 |
| Indicators and warning lights ... | 109 |
| Trip information display | 113 |

| | |
|---|------------|
| 2-3. Operating the lights and windshield wipers..... | 116 |
| Headlight switch..... | 116 |
| Fog light switch | 119 |
| Windshield wipers and washer..... | 120 |
| Rear window wiper and washer | 123 |
| Headlight cleaner switch | 124 |
| 2-4. Using other driving systems.... | 125 |
| Cruise control | 125 |
| Dynamic laser cruise control ... | 128 |
| Driving assist systems..... | 138 |
| Electronically modulated air suspension..... | 142 |
| 2-5. Driving information..... | 147 |
| Off-road precautions | 147 |
| Cargo and luggage..... | 152 |
| Vehicle load limits..... | 155 |
| Winter driving tips | 156 |
| Trailer towing..... | 161 |
| Dinghy towing | 171 |

3 Interior features

| | |
|--|------------|
| 3-1. Using the air conditioning system and defogger | 174 |
| Automatic air conditioning system (without navigation system)... | 174 |

| | |
|---|-----|
| Rear window and outside rear view mirror defoggers, and windshield wiper de-icer..... | 180 |
|---|-----|

| | |
|---|------------|
| 3-2. Using the front audio system | 181 |
| Audio system type (without navigation system) | 181 |
| Using the radio..... | 183 |
| Using the CD player..... | 190 |
| Playing back MP3 and WMA discs | 196 |
| Optimal use of the audio system | 204 |
| Using the steering wheel audio switches..... | 207 |
| 3-3. Using the rear audio system | 209 |
| Rear seat entertainment system features..... | 209 |
| Using the DVD player (DVD video)..... | 215 |
| Using the DVD player (video CD)..... | 222 |
| Using the DVD player (audio CD/ CD text)..... | 224 |
| Using the DVD player (MP3 discs)..... | 225 |
| Using the video mode..... | 227 |
| Changing the initial setting | 229 |

3-4. Using the interior lights 236

- Interior lights list..... 236
- Interior lights 239
- Personal lights 240

3-5. Using the storage features 241

- List of storage features..... 241
- Glove box..... 241
- Console boxes 242
- Overhead console..... 244
- Cup holders..... 245
- Door pockets 246

3-6. Other interior features..... 247

- Sun visors..... 247
- Vanity mirror 248
- Clock..... 249
- Outside temperature display 250
- Multi-display light control..... 251
- Power outlet 252
- Seat heaters..... 255
- Armrest 257
- Floor mat..... 258
- Luggage compartment features 259
- Garage door opener..... 262
- Compass..... 267

4 Maintenance and care**4-1. Maintenance and care..... 272**

- Cleaning and protecting the vehicle exterior 272
- Cleaning and protecting the vehicle interior..... 275

4-2. Maintenance..... 278

- Maintenance requirements 278
- General maintenance..... 280
- Emission inspection and maintenance (I/M) programs 283

4-3. Do-it-yourself maintenance..... 284

- Do-it-yourself service precautions 284
- Hood..... 287
- Positioning the jack 288
- Engine compartment..... 290
- Tires 304
- Tire inflation pressure..... 311
- Wheels..... 315
- Air conditioning filter..... 317
- Wireless remote control battery..... 319
- Rear seat entertainment system controller 321

| | |
|---|-----|
| Checking and replacing fuses..... | 323 |
| Headlight aim (vehicles with discharge headlights)..... | 335 |
| Light bulbs..... | 336 |

5 When trouble arises

| | |
|--|----------------|
| 5-1. Essential information | 350 |
| If your vehicle needs to be towed..... | 350 |
| If you think something is wrong | 357 |
| Fuel pump shut off system | 358 |
| Event data recorder | 359 |
| 5-2. Steps to take in an emergency | 361 |
| If a warning light turns on or a warning buzzer sounds... .. | 361 |
| If you have a flat tire..... | 368 |
| If the engine will not start | 378 |
| If the shift lever cannot be shifted from P | 379 |
| If you lose your keys | 380 |
| If the vehicle battery is discharged | 381 |
| If your vehicle overheats | 384 |
| If the vehicle becomes stuck..... | 386 |

6 Vehicle specifications

| | |
|--------------------------------------|----------------|
| 6-1. Specifications..... | 388 |
| Maintenance data..... | 388 |
| Fuel information..... | 399 |
| Tire information | 402 |
| 6-2. Customization | 410 |
| Customizable features | 410 |
| 6-3. Initialization | 414 |
| Items to initialize | 414 |

7 For US owners

| | |
|---|-----|
| Reporting safety defects for U.S. owners..... | 416 |
|---|-----|

Index

| | |
|--------------------------------|----------------|
| Alphabetical index..... | 418 |
| What to do if... .. | 427 |